

HOW TO PROGRAM YOUR REMOTE



PROGRAM YOUR URS-SR3 CABLE BOX REMOTE TO CONTROL YOUR TV

PROGRAMMING DEVICE CONTROL

Each of the additional device keys controls a particular type of device. For example, the TV key controls your TV.

1. Turn on the equipment that you want the remote control to operate TV and DVD.
2. Press the [DEVICE] button and the [OK/SEL] button simultaneously for 10 seconds. The corresponding device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 20 seconds. The next step must be entered while the LED is on.
3. Point the remote control toward the equipment and enter the three-digit code number assigned to your brand from the code tables. If there are more than one three-digit number listed for your brand, try one code number at a time until your equipment turns off.
4. Store the three-digit code by pressing the same [DEVICE] button once again. The device LED will blink twice to confirm that the code has been stored.

***Note :** Try all the functions on the remote control. If any of the functions do not operate as they should, repeat the instructions from Step 2 using the next three-digit code number from the same brand list.

ADMIRAL	072 081 160 161 096	CAPEHART	058	ELECTROBAND	001
AD NOTAM	672	CARVER	164	ELECTROHOME	024 076 127
ADVENT	147	CELEBRITY	001	ELEMENT	004 110 622
AFFINITY	680	CETRONIC	043	EMERSON	005 028 043 048 076 096 155 004 051 151 153 154 127 121
AIWA	141 145	CINERAL	103 120	ENVISION	070
AKAI	070 146 004 148 124 226 104 108 244	CITIZEN	070 002 003 004 101 103 127	EPSON	087 228
AKIO	103	CLASSIC	043	ESA	031
ALARON	028	COBY	640 641 671	FUJITSU	164 197 028 157 149 066 217
AMARK	112 127	CONCERTO	004	FUNAI	028 043 052 168
AMERICA ACTION	043	CONTEC	043 051	FUSION	642
AMPRO	073 167	CORONADO	127	FUTURETECH	043
ANAM	043 054 056 080 112 131	CRAIG	043 054 028	GATEWAY	165 031
AOC	058 070 004 112 245	CROSLEY	164	GE	070 073 130 144 160 161 004 008 009 034 056 074 091 155 081 120
APEX	092	CROWN	043 127	GEM	031
APEX DIGITAL	015 150 037	CURTIS MATHES	070 004 101 011 072 081 120 164 127	GIBRALTER	004 073
AQUAVISION	097 100	CXC	043	GOLDSTAR	004 106 112 127
AUDIOVOX	076 103 043 035 078 224	DAEWOO	076 103 112 004 127 016 043 044 125 120	GPX	674
AVIELO	090 628	DAYTRON	004 127	GRUNPY	028 043
AVION	223	DELL	041 249	HAIER	004 116 623
BAYSONIC	043	DENON	011	HALL MARK	004
BELL&HOWELL	072	DIGITAL PROJECTION	090	HANNSPREE	099
BENQ	234	DUMONT	004 073	HARLEY DAVIDSON	028
BRADFORD	043	DWIN	131 132 161	HARMAN KARDON	164
BROKSONIC	096 170	DYNASTY	043		
CAIRN	162	DYNATECH	062		
CANDLE	070 002 003 004	FISHER	007 057		

HARVARD	043	MIDLAND	073	RADIO SHACK	004 019 127 043
HISENSE	198 021 619 630 631	MINERVA	088	RCA	160 161 144 156 065
HITACHI	004 007 009 011 072	MINTEK	077		070 004 023 024 056
	010 012 023 075 158	MINUTZ	008		074 152 081 209
	127 174 243 670	MITSUBISHI	109 024 042 004 040	REALISTIC	007 019
HP	027 039 098		146 028 124 081 200	REVOLUTION HD	220
HUMAX	122		235	RUNCO	072 073 130 179 180
HYPERION	242	MOTOROLA	081		181 182 216 194
HYUNDAI	049 067	MTC	070 004 062 101	SAMPO	070 004 058 165
ILO	055 096	MULTITECH	043	SAMSUNG	004 101 127 133 160
INFINITY	164	NAD	015 025		089 105 070 184 185
INFOCUS	046 215 225 233	NEC	070 130 134 040 056		192 515 655
INKEL	129		007 019 024 004 182	SANSEI	120
INSIGNIA	068 069 078 096 164		140	SANSUI	096 244
	168 247	NEXUS	620 078	SANYO	007 053 057 082 020
INTEQ	073	NIKEI	043	SCEPTRE	036
JADOO TV	673	NIKKO	103	SCOTCH	004
JBL	164	NIKO	175	SCOTT	004 005 028 043 048
JCB	001	NORCENT	211		127 113
JCPENNEY	004 008 024 030 065	NTC	103	SEARS	004 007 015 028 030
	070 101 160 156 127	NUVISION	084		057 082 094 160 052
JENSEN	013	OLEVIA	219 004 161 144 160		164 127
JVC	038 001 034 083 195	ONKING	043	SELECO	189
	159 227 639	ONWA	043	SEMIVOX	043
KENWOOD	070 001	OPTIMUS	080	SEMP	015
KLEGG	220	OPTOMA	029 032	SHARP	081 014 019 028 004
KLOSS	002 059	OPTONICA	019 081		022 127
KREISEN	202	ORION	096 201 203 204 205	SHERWOOD	128
KTV	070 043 154 127		028	SIGNATURE	072
LG	004 106 112 127 086	PANASONIC	034 056 080 164 190	SOLE	177 178
	236 648		230 248 237 240 664	SONY	001 085 126 139 241
LODGENET	072	PHILCO	070 003 004 024 056		633
LOEWE	196 164		059 060 063 064 127	SOUNDESIGN	003 004 028 043
LOGIK	072		164	SOYO	163
LUXMAN	004	PHILIPS	164 005 038 093 127	SPECTRICON	112
LXI	007 015 052 081 160		070 003 004 059 199	SPECTRONIQ	004
	164		218 161 232 629	SQUAREVIEW	052
MAGNAVOX	070 003 004 022 059	PIONEER	023 025 135 176 004	SSS	004 043
	060 061 063 064 127		018 070 183 191 208	STARLITE	043
	164 094 160 056 028		214 182 660	SUNBRITE	633 634 635 236
	035 211 205 218 050	POLAROID	026 118 119 006	SUNBRITE TV	238
	138	PORTLAND	004 103 127	SUPRE MACY	002
MAJESTIC	072	PRISM	034	SUPREME	001
MARANTZ	164 070 143 169	PROSCAN	144 160 161 167	SVA	046
MATSUI	164	PROTON	004 058 171 173 193	SYLVANIA	070 003 059 060 063
MATSUSHITA	080		127 163		064 127 160 164 044
MAXENT	165	PROTRON	102 213 004 115		056 168 121 231
MEGATRON	004	PROVIEW	110	SYMPHONIC	052 168
MEMOREX	004 007 072 028 096	PROX	092	SYNTAX OLEVIA	219 004 161 144 160
METZ	088	PYLE HOME	661 662	TANDY	081
MGA	024 070 004 042	QUASAR	034 056 239	TATUNG	056 062

TECHNICS	034 080	TOTEVISION	127	WINBOOK	079
TECHNOL ACE	028	TRUTECH	212	YAMAHA	004 070 206 207
TECHVIEW	246	UNIVERSAL	008 009	YORK	004
TECHWOOD	004	VIDEO CONCEPTS	146	YUPITERU	043
TEKNIKA	002 003 004 024 028 043 072 101 103 164 127	VIDIKRON	188 164 182	ZENITH	011 072 073 095 103 096
TELEFUNKEN	244	VIDTECH	004	ZONDA	112
TELERENT	072	VIEWSONIC	210 211		
TERA	172	VIORE	055 229		
THOMPSON	166	VISCO	110		
TILEVISION	663	VIZIO	004 031 236 624 625 675		
TMK	004	WARDS	004 064 164 008 009 019 028 060 061 063 072 074 070 127		
TNCI	073	WESTINGHOUSE	076 036 221 222 001 280		
TOSHIBA	015 030 007 040 062 101 142 045 137				

Codes for additional devices such as DVD players can be found in the Easy Clicker Universal Remote Control User Guide. A digital copy of the User Guide can be found at www.cascable.com/contact

SEARCHING FOR CODES

If none of the three digit code numbers assigned to your brand of equipment works, or the code table does not list your brand, you can use the Auto Search Method to find the correct three-digit code number for your equipment by following steps:

1. Turn on the equipment that you want the remote control to operate (Cable Box, TV, VCR, or DVD).
2. Press the [DEVICE] button and the [OK/SEL] button simultaneously for 10 seconds. The device LED will turn on indicating that it is ready to be programmed. The LED will remain on for 20 seconds. The next step must be entered while the LED is on.
3. Press the [CH+] or [CH-] button one at a time or keep it pressed. The remote will emit a series of Power ON/OFF code signals. Release the [CH+] or [CH-] button as soon as the equipment turns off.
4. Press the same [DEVICE] button to store the code. The Device LED will blink twice to confirm that the code has been stored.